


PHILIPS

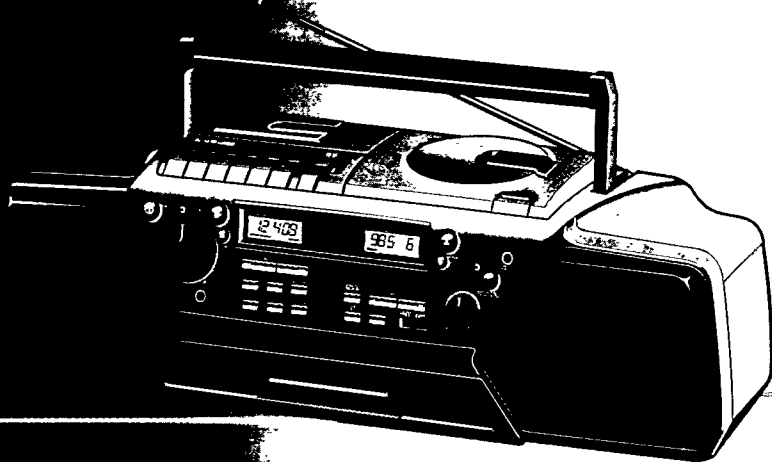

AZ 8210

AZ 8211

AZ 8214

(GB) Radio cassette recorder/CD-player	5
(F) Radiocassette/lecteur de CD	11
(D) Radio-Cassettenrecorder/CD-Spieler	17
(NL) Radiocassetterecorder/CD-speler	23
(E) Radiocassete/lector de CD	29
(I) Radioregistratore/lettore CD	35
(S) Radiokassett/CD-spelare	41
(SF) Radionauhuri/CD-soitin	47



PHILIPS

(MEX) México

Es necesario que lea cuidadosamente su instructivo de manejo.



NOM

(DK) Danmark

Typeskiltet findes på undersiden af apparaten. Dette produkt overholder kravene til radio-interferens af Europæisk Fællesskab.

Bemærk: Netafbryderen POWER er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lys-nettet så længe netstikket sidder i stikkontakten.

Advarsel: Usynlig laserudstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

Garanti og service

sider 54-56

(N) Norge

Typeskilt finnes på apparatens underside.

Observer: Netbryteren POWER er sekundært innkoplet. Den innebygde netdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

Garanti og service

sider 54-56

(GB) English

Illustrations
Guarantee and service

page 5

pages 3-4
pages 54-56

English

(F) Français

Illustrations
Garantie et service après-vente

page 11

pages 3-4
pages 54-56

Français

(D) Deutsch

Abbildungen
Garantieleistung und Service

Seite 17

Seiten 3-4
Seiten 54-56

Deutsch

(NL) Nederlands

Afbeeldingen
Garantie en service

pagina 23

pagina's 3-4
pagina's 54-56

Nederlands

(E) Español

Ilustraciones
Garantía

página 29

páginas 3-4
páginas 54-55

Español

(I) Italiano

Illustrazioni
Garanzia e servizio

pagina 35

pagine 3-4
pagine 54-56

Italiano

(S) Svenska

Figurer
Garanti och service

sida 41

sidorna 3-4
sidorna 54-56

Svenska

(SF) Suomi



Kuvat
Takuu ja huolto







sivu 47

sivut 3-4
sivut 54-56

Suomi

**CLASS 1
LASER PRODUCT**

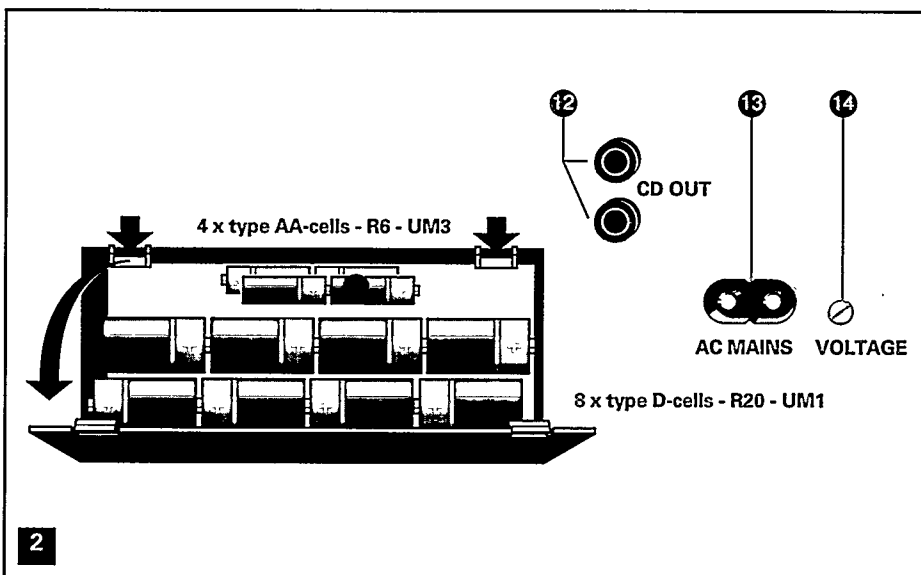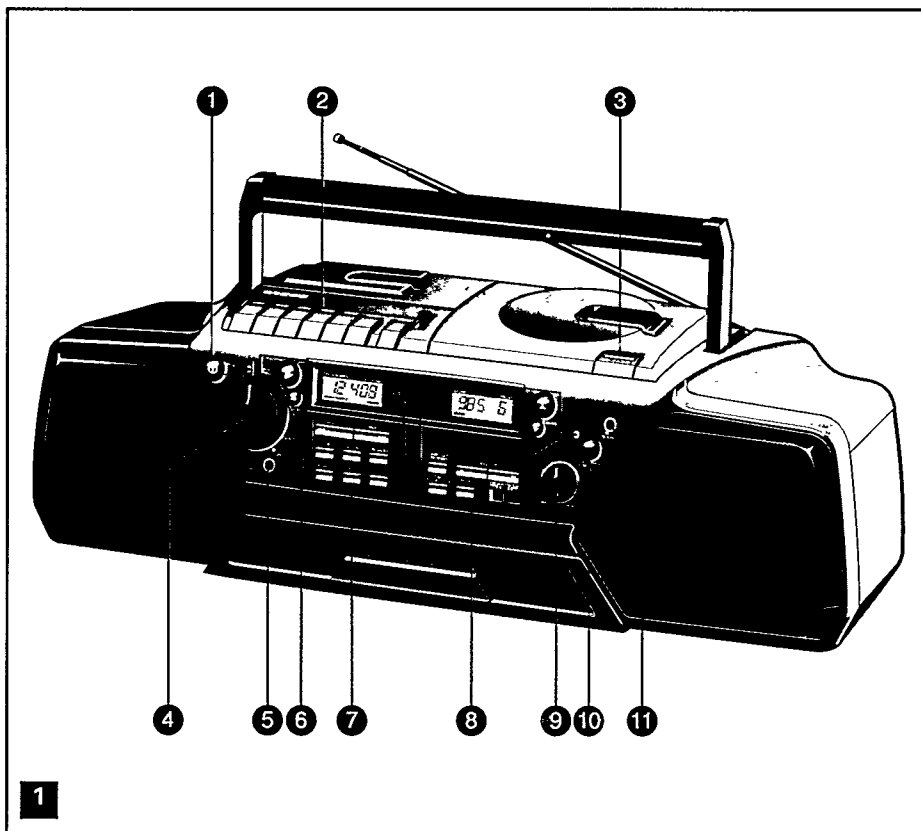

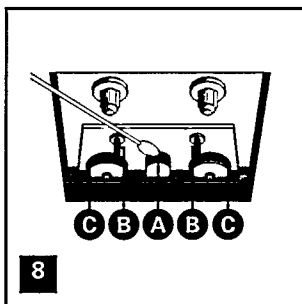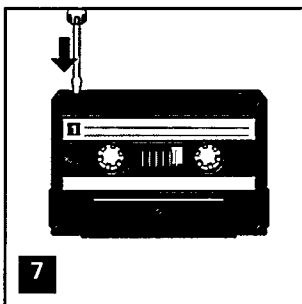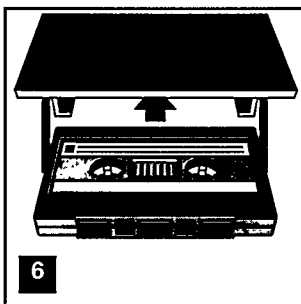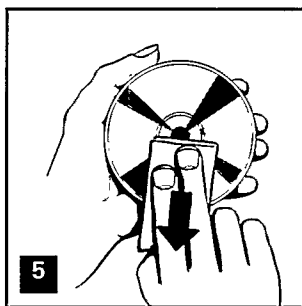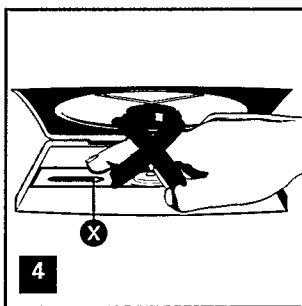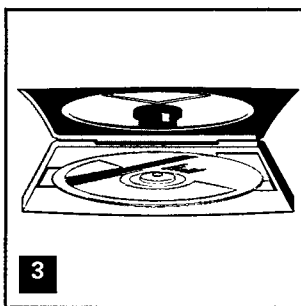

CONTROLSFor the illustrations, keep the pages 3 and 4 open

TOP AND FRONT PANEL - fig. 1

- ① POWER button with ON indicator *
 - ② cassette deck keyboard:
 - STOP/EJECT
 - RECORD
 - ▶ PLAY
 - ◀◀ REWIND - fast rewind
 - ▶▶ F.FWD - fast forward wind
 - ⏸ PAUSE
 - ◀ DIRECTION - to change the play direction
 - ▶ tape direction indicators
 - TAPE MODE reverse selector
 - no reverse
 - ↶ single reverse
 - ↷ continuous reverse (playback only)
 - ③ OPEN/CLOSE to open the CD cover
 - ④ VOLUME control
 - ⑤ PHONES stereo headphone socket
 - ⑥ TUNER - TAPE - CD - mode selector to select the sound source
 - ⑦ CD keyboard and display:
 - ▶ - PLAY ▶ and PAUSE ⏸ button
 - - STOP button
 - ◀◀ PREVIOUS/NEXT ▶▶ and ◀◀ SEARCH ▶▶:
 - ◀◀ PREVIOUS/NEXT ▶▶:
 - in position playback or STOP, press briefly to jump to a previous ◀◀ or next ▶▶ track
 - ◀◀ SEARCH ▶▶:
 - during playback, keep pressed to search fast backward ◀◀ or forward ▶▶
 - INTROSCAN - to play only the beginning of each track
 - SHUFFLE - to play all tracks in a random order
 - press again to defeat the SHUFFLE function
 - REPEAT - to repeat continuously the disc or the stored selection (memory)
 - press again to defeat the REPEAT function
 - CLEAR - to erase the memory
 - DISPLAY - to display all stored track numbers
 - STORE - to store the displayed track number in the memory
- CD display, shows:**
 ----: - - please wait
 TRACK - the total number of tracks
 and during PLAY the number of the track being played
 TIME - the total playing time of the disc
 and during PLAY the elapsed time of that track
 REPEAT activated
 SHUFFLE activated
 MEMORY - the stored selection (memory) is played
 SCAN (INTROSCAN) activated
 PAUSE activated

- ⑧ TUNER/CLOCK keyboard and display:
 - FM MW LW SW (or AM/FM)
 - ▲▼ TUNING buttons
 - ▲/▼ PRESET - to select PRESET stations
 - TIME SET/MEMORY - to store station frequencies and to adjust the time
 - MONO/STEREO - FM mono/stereo button
 - TIME/FREQUENCY - to display either frequency or time
- TUNER/CLOCK display, shows:**
 - FM/MW/LW/SW or AM/FM - the wave band
 - frequency in MHz (FM-SW) or kHz (AM/MW-LW)
 - the actual time (12 or 24 hours indication)
 - AM or PM in case of 12 hours time indication
 - PRESET 1...5 indicating the PRESET location of the shown frequency
 - STEREO - when receiving an FM stereo station
- ⑨ BASS/TREBLE tone control
- ⑩ TURBO BASS GENERATOR bass button with indicator * - press ▶ to boost the bass response
- ⑪ MIC - microphone socket

BACK PANEL - fig. 2

- ⑫ CD OUT sockets - for CD-reproduction through e.g. your stereo system
- ⑬ AC MAINS - socket for mains lead
- ⑭ VOLTAGE selector (*not on all versions*)

The type plate is located on the base of the set

English

Français

Deutsch

Nederlands

Español

Italiano

Svenska

Suomi

SUPPLY

Batteries

Whenever convenient, use AC mains supply if you want to conserve battery life.

- Open the battery compartment (fig. 2).
- 1. Insert as indicated eight (preferably Alkaline) batteries, type R20, UM1 or D-cells (fig. 2).
The battery supply is switched off when the set is connected to the mains. When changing over to battery supply, pull out the plug from the AC MAINS socket ⑬.
- 2. For the clock and the radio memory, insert four batteries, type R6, UM3 or AA-cells (fig. 2).
- Remove the batteries if exhausted or if they will not be used again for a long period.

Mains

- Check if the mains voltage as shown on the type plate corresponds to your local mains supply. If it does not, consult your dealer or service organisation.
If the set is equipped with a VOLTAGE selector ⑬, set this selector to the local mains voltage.
- Connect the mains lead to the AC MAINS socket ⑬ and the wall socket. The mains supply is now switched on.
- To disconnect the set from the mains completely, withdraw the mains plug from the wall socket.

Important note for users in U.K.:

When fitting a mains plug to the mains lead proceed as follows:

The wires in the mains lead are coloured in accordance with the following code: Blue=Neutral, Brown=Live. These colours may not correspond with the colour markings identifying the terminals in your plug, so proceed as follows:

Connect the Brown wire to the terminal marked L or coloured Red.

Connect the Blue wire to the terminal marked N or coloured Black.

Do **not** connect either wire to the earth terminal in the plug, marked E or $\frac{1}{2}$ or coloured green, or green and yellow.

Note: This apparatus must be protected by a 3 Amp Fuse if a 13 Amp plug is used or, if any other type of plug is used, by a 5 Amp Fuse either in the plug or adapter or at the distribution board. If in doubt consult a qualified electrician.

CONNECTIONS - fig. 1-2

Stereo headphone socket ⑤ PHONES

For stereo headphones with 3.5 mm plug. Inserting the plug will disconnect the loudspeakers.

CD Output sockets CD OUT ⑫

Cinch-sockets for CD-reproduction (not radio or cassette) through e.g. your stereo system.

- Connect the CD OUT sockets ⑫ to the input sockets LINE IN, AUX or CD of the other set.
The CD OUT output signal is not affected by the position of the controls VOLUME ④, BASS/TREBLE ⑨ and TURBO BASS GENERATOR ⑩.

Socket for microphone ⑪ MIC

For a microphone with 3.5 mm plug.

To avoid disturbing noises, reduce the VOLUME ④ before connecting the microphone.

- 'Public address': you can reproduce your voice amplified through the loudspeakers: set the mode selector ⑥ to TAPE.
- Disc-jockey: you can mix your voice with the CD, TAPE or TUNER: set the mode selector ⑥ to CD, TAPE or TUNER.
- In position CD or TUNER, you can record it all on the cassette deck.

Adjust the sound with the controls VOLUME ④, BASS/TREBLE ⑨ and TURBO BASS GENERATOR ⑩. If a howling sound occurs, keep the microphone away from the loudspeakers or reduce the VOLUME ④.

Disconnect the microphone when not in use.

TUNER

RADIO RECEPTION

- Switch on the set using the POWER button ①.
- Set the mode selector ⑥ to TUNER.
- Adjust the sound with the controls VOLUME ④, BASS/TREBLE ⑨ and the TURBO BASS GENERATOR bass button ⑩.
- Select the wave band using the selector FM MW LW SW (or AM/FM). (SW and LW not on all versions).
- For FM, pull out the telescopic aerial. To improve FM-reception, incline and turn the aerial. Reduce its length if the FM-signal is too strong (very close to a transmitter).
- For AM/MW and LW (Medium and Long Wave), the set is provided with a built-in aerial, so there is no need to use the telescopic aerial. The aerial can be directed by turning the whole set.
- For Short Wave (SW), the telescopic aerial must be pulled out and placed in the vertical position. To improve SW-reception, vary the length of the aerial.
- Tune automatically, manually or by means of the PRESET-buttons $\blacktriangle/\blacktriangledown$ to a radio station.

Automatic tuning (not on SW)

- Keep the TUNING button \blacktriangle or \blacktriangledown pressed until *R* appears on the display; then release the button. The receiver stops when finding a strong station.
- If the station found is not the desired one, simply repeat this operation.

Manual tuning

Manual tuning is useful when you already know the frequency of the desired station (e.g. from your programme guide), and if you want to tune to a weak station.

- Keep the TUNING button \blacktriangle or \blacktriangledown pressed until you approach the required frequency.
- Then release the button and press the opposite TUNING button quickly and briefly: then the displayed frequency stops.
- Then press TUNING \blacktriangle or \blacktriangledown briefly each time. In this way the frequency is changed step-by-step until finally the right frequency has been reached. One step is 0.05 MHz (50 kHz) on FM, 9 or 10 kHz on MW, 1 kHz on LW and 5 kHz on SW.
- When the word STEREO appears in the display, you are receiving a FM-stereo station. A disturbing noise, due to a weak FM-stereo signal, can be suppressed by pressing the MONO button once. The word STEREO will then disappear and you will hear (and record) the FM programme in mono.
- The radio returns to STEREO when pressing MONO again or when selecting another station.
- Always switch off the set after use with POWER button ①.

PREFERRED STATIONS - PRESET

For each wave band, you can store the frequencies of up to 6 stations in the memory.

Storing station frequencies

1. Select the wave band using the selector FM MW LW SW (or AM/FM).
 2. Using the TUNING $\blacktriangle/\blacktriangledown$ buttons, tune either automatically or manually to the frequency to be stored.
 3. If you want to store the frequency shown, press TIME SET/MEMORY; the PRESET number starts flashing. \blacksquare means that the shown frequency has not yet been stored.
 4. Within 5 seconds, select the desired PRESET location using the PRESET buttons $\blacktriangle/\blacktriangledown$.
 5. Then press TIME SET/MEMORY again; the frequency is now stored.
- A stored frequency is only erased from the memory by storing another frequency in its place.
 - In case of mains breakdown or exhausted batteries, the contents of the memory will be kept by the four R6, UM3 or AA buffer batteries (fig. 2).

Tuning to a preselected station

- Set the mode selector ⑥ to TUNER.
- Select the wave band using the selector FM MW LW SW (or AM/FM).
- Select the desired PRESET location using the PRESET buttons $\blacktriangle/\blacktriangledown$.

CLOCK

In position CD or TAPE, and also if the set is switched off, the display shows the time.

In position TUNER, you can select time or frequency indication by pressing TIME/FREQUENCY.

You can choose between 24 hours or 12 hours time indication: first set the mode selector ⑥ to TAPE, then keep TIME SET/MEMORY pressed and press TIME/FREQUENCY.

In case of 12 hours indication, AM or PM appears on the display.

Time setting

- Switch on the set using the POWER button ①.
- First, set the mode selector ⑥ to TAPE (not TUNER or CD).
- Keep at the same time the buttons TIME SET/MEMORY and PRESET \blacktriangle or \blacktriangledown pressed: after some seconds, the displayed time starts running. When approaching the actual time, release \blacktriangle or \blacktriangledown and the displayed time stops.
- Keep TIME SET/MEMORY pressed and press PRESET \blacktriangle or \blacktriangledown briefly each time; the time is changed minute-by-minute until you finally reach the correct time.
- The clock starts running when releasing the TIME SET/MEMORY button.
- In case of mains breakdown or exhausted batteries, the clock runs on the four R6, UM3 or AA buffer batteries (fig. 2).

COMPACT DISC

PLAYING A DISC

- Switch on the set using the POWER button ①.
 - Set the mode selector ⑥ to CD: on the display appears ----:--.
 - Adjust the sound with the controls VOLUME ④, BASS/TREBLE ⑤ and TURBO BASS GENERATOR ⑩.
 - Press OPEN/CLOSE ③ to open the disc cover.
 - Insert the disc, printed side facing up (fig. 3).
 - Close the cover. The CD-player starts and scans the contents list of the disc. After that, the total playing time and the number of tracks appear on the display and the CD-player stops.
 - Playback will start by pressing PLAY ►. As soon as playback starts, the display shows the track number 1 and the elapsed playing time of the first title. When the second title is reached the track number 2 appears, etc.
 - For brief interruptions, press PAUSE II. The word PAUSE then appears. To continue playback, press PAUSE again.
 - To stop playback, press STOP ■.
- The CD player also goes to position STOP:
- by pressing OPEN/CLOSE ③;
 - when the end of the disc is reached;
 - if you move the function selector ⑥;
 - by switching off the set;
 - if the batteries run down or if the power supply is interrupted in another way.
 - To take out the disc, open the disc cover by pressing OPEN/CLOSE ③. Open the disc cover only if the CD-player is in position STOP.
 - Always switch off the set after use with POWER button ①.

Remarks

- If the battery voltage is not sufficient any more for playing a disc, the CD-player will not start.
- If ----:-- does not disappear, the CD-player cannot read the disc. Possible causes are:
 - you inserted the disc the wrong way: the label should face up (fig. 3);
 - the surface of the disc is badly scratched or dirty, see 'Maintenance';
 - the lens ⑧ (fig. 4) is steamed up because of a sudden transition from a cold into a warm environment; do not clean the lens, but let the set acclimatize for a while.

REPEAT

If you want to repeat the whole disc (or the stored selection) continuously, press REPEAT: the word REPEAT appears.

The REPEAT function can only be switched on during playback: PLAY, SHUFFLE or INTROSCAN.

To defeat the REPEAT-function, press REPEAT again and the word REPEAT disappears.

INTROSCAN

The INTROSCAN function can be switched on from the STOP, PLAY and SHUFFLE mode.

- Press INTROSCAN. The word SCAN then appears. Only the first few seconds of each track are played, but always from track number 1.

- The moment you press PLAY ► or SHUFFLE, the INTROSCAN function is defeated (the word SCAN disappears) and the disc is played in the normal way from this track number.

- If you press ◀ or ▶, the INTROSCAN function remains operative and the beginning of the next ▶ or previous ◀ track is played.

- If INTROSCAN is not defeated by pressing PLAY ►, SHUFFLE or STOP ■, the CD player returns to STOP as soon as the end of the disc is reached.

SHUFFLE

If you want to play all tracks in a random order, press SHUFFLE: the word SHUFFLE appears.

The SHUFFLE function can be switched on from the STOP, PLAY, REPEAT and INTROSCAN mode.

To defeat the SHUFFLE-function, press SHUFFLE again and the word SHUFFLE disappears.

◀ PREVIOUS/NEXT ▶ - ◀ SEARCH ▶▶

1. ◀ PREVIOUS/NEXT ▶▶

Press briefly (less than 1 second)

a. During PLAY, INTROSCAN and SHUFFLE:

▶▶ - go to the next track (title)

You can jump to the next title by pressing ▶▶ once. If you want to skip more than one track, then press ▶▶ more than once until the display shows the desired track number.

◀◀ - go to the previous track (title)

If you want to repeat the running title from the beginning, press ◀◀ once.

If you want to repeat one of the previous titles, press ◀◀ more than once until the display shows the required track number.

b. In position STOP:

In position STOP with a disc inserted you can select the desired title using ◀◀ and ▶▶ until the display shows the required track number.

2. ◀ SEARCH ▶▶

During playback, keep ▶▶ for search forward and ◀◀ for search backward pressed. The disc is played partly and at high speed, however, the sound is still recognizable.

Release the button as soon as you recognize the required passage: the disc will be played in the normal way from this passage.

If the button is pressed longer than 10 seconds, the search speed increases.

PROGRAMMING TRACK NUMBERS

You may select a number of tracks and store these in the memory in the desired sequence. When playing, you will only hear the stored titles in the selected sequence. At most, 20 tracks can be stored in the memory. You may store each track more than once.

Manual selecting

- Load the disc, but do not press PLAY ► yet.
- Select the desired track using the buttons ◀ and ▶ until the display shows the required track number.
- Store this track by pressing STORE.
- Select and store in this way all desired titles.

Storing during INTROSCAN

- Press INTROSCAN to play the first few seconds of each track.
- Press STORE as soon as you recognize a desired title.

Storing during PLAY

- During normal PLAY you may store the running title by pressing STORE.
- After pressing STORE the character P (PROGRAM) appears, indicating that the track has been stored.
- Store all desired titles in the required sequence. You may store each track more than once.
- At most, 20 tracks can be stored in the memory. When the memory is full, the character F (FULL) appears.
- When pressing DISPLAY, the display will show in sequence all stored track numbers.
- You can simply erase the whole memory by pressing CLEAR: the character L for CLEAR appears now. The contents of the memory are also erased:
 - by opening the disc cover using OPEN/CLOSE ③;
 - if you move the function selector ⑥;
 - by switching off the set;
 - if the batteries get exhausted or if the power supply is interrupted in another way.

How to play the stored selection

To play your selection, the CD-player should be in position STOP; then press PLAY ►: now, the word MEMORY appears.

RECORDING

Preparation

- Switch on the set using the POWER button ①.
- Press EJECT ■ to open the cassette holder.
- Insert the cassette (fig. 6).

For recording you must use a cassette on which the tabs (fig. 7) are not broken out.

At the very beginning of the tape, no recording will take place during the first 7 seconds when the leader tape passes the recorder heads.

- Set the TAPE MODE selector to:

— no reverse, to record one cassette side. The deck stops at the end of the tape.

— single reverse, to record on both cassette sides once. At the end of the first cassette side, the tape direction is reversed and the TAPE MODE selector jumps to position —. The deck stops at the end of the second cassette side.

— continuous reverse for continuous recording. At the end of the second cassette side, the recorder **does not stop recording**, but erases and overwrites the previous recording.

- Select the tape direction using DIRECTION button ◀.
- When monitoring during recording, adjust the sound with the controls VOLUME ④, BASS/TREBLE ⑤ and TURBO BASS GENERATOR ⑩. These controls do not affect the recording.

Recording from the CD-player

- Set the mode selector ⑥ to CD. It's not necessary to start the CD-player separately: if you press RECORD ●, the CD-player starts automatically:
 - if the CD-player is in position STOP, recording will start from the beginning of the disc (or from the beginning of the programmed selection);
 - if the CD-player is in position PAUSE, recording will start from this very position;
 - in position SCAN the CD-player will first return to the beginning of that track and then recording will start.

Recording from the radio

- Set the mode selector ⑥ to TUNER.
- Tune to the desired radio station.
- In case of FM radio recordings, set the FM MONO/STEREO button to the desired position.

Microphone recording

- Connect the microphone to the socket MIC ⑪.
- Microphone only: set mode selector ⑥ to TAPE;
- Mixing with CD: set mode selector ⑥ to CD;
- Mixing with radio: set mode selector ⑥ to TUNER.
- If a howling sound occurs:
 - keep the microphone away from the loudspeakers,
 - or reduce the VOLUME ④,
 - or use headphones for monitoring.

Starting and stopping the recording

- Start recording by pressing RECORD **Ⓢ**; in doing so, PLAY **▶** is pressed too.
- For brief interruptions, press PAUSE **⏸**. To restart recording, press this button once more.
- To stop recording, press STOP **■**. On pressing again, the cassette holder will open.
- Always switch off the set after use with POWER button **Ⓛ**.

COPYRIGHT

Recording is permissible insofar as copyright or other rights of third parties are not infringed.

For U.K. only: Recording and Playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

FAST WINDING

Press **◀◀** or **▶▶**. To stop fast winding, press STOP **■**.

SAFEGUARDING AGAINST ERASURE

Keep the cassette side to be safeguarded in front of you (fig. 7) and break out the left tab. Now, recording on this side is no longer possible.

You can render this safeguard ineffective by covering the aperture with a piece of adhesive tape.

CASSETTE PLAYBACK

- Switch on the set using the POWER button **Ⓛ**.
- Set the mode selector **Ⓢ** to TAPE.
- Adjust the sound with the controls VOLUME **Ⓢ**, BASS/TREBLE **Ⓢ** and TURBO BASS GENERATOR **Ⓢ**.
- Press EJECT **■** and insert a recorded cassette (fig. 6).
- Fast winding and rewinding: Press **◀◀** or **▶▶**. To stop, press STOP **■**.

- Set the TAPE MODE selector to:

— no reverse, to play one cassette side. So, the deck stops at the end of the tape.

— single reverse, to play both cassette sides once. At the end of the first cassette side, the tape direction is reversed and the TAPE MODE selector jumps to position —. The deck stops at the end of the second cassette side.

— continuous reverse, for non-stop playback: the deck reverses the play direction whenever reaching the end of the cassette.

- Select the tape direction using DIRECTION button **Ⓢ**.
- Press PLAY **▶** and playback will start.

You can reverse the play direction at any moment by pressing DIRECTION **Ⓢ**. The tape direction indicators **◀▶** show the actual play direction.

- To stop playback, press STOP **■**.

When the end of the tape is reached, the recorder buttons are released (except for non-stop play).

- Always switch off the set after use with POWER button **Ⓛ**.

MAINTENANCE**CD-player and discs**

- The lens **Ⓢ** (fig. 4) should never be touched or cleaned.
- The lens may steam up when the set is taken from a cold into a warm environment. Playing a disc is not possible then. Do not clean the lens, but let the set acclimatize for a while.
- Always pick up the disc by the edge and put it back in its box immediately after use.
- To clean, breath on the disc and wipe it off in a straight line from centre to edge (fig. 5) using a soft, lint-free cloth. Cleaning agents may harm the disc.

Cassette deck

To ensure a good recording and playback quality, clean the parts **Ⓢ** **Ⓢ** **Ⓢ** indicated in fig. 8 after every 50 hours of operation or, on average, once a month.

- Open the cassette holder by pressing EJECT **■**.
- Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid.
- Press PLAY **▶** and clean the rubber pressure rollers **Ⓢ** (fig. 8).
- Then press PAUSE **⏸** and clean the magnetic head **Ⓢ** and the capstans **Ⓢ**.
- After cleaning, press STOP **■**.

Cleaning of the magnetic head **Ⓢ** can also be done by playing the cleaning cassette SBC 114 through once as an ordinary cassette.

Remarks

- The CD-player and the cassette decks are fitted with self-lubricating bearings which must not be oiled or greased.
- Fingerprints, dust and dirt on the apparatus can be removed using a soft, clean and slightly damp leather cloth. Do not use any cleaning agents, since they may affect and harm the cabinet.
- Keep the set, batteries, discs and cassettes away from rain, moisture, sand and excessive heat, e.g. near heating equipment or in cars parked in the sun.

This product complies with the radio interference requirements of the European Community.

GUARANTEE AND SERVICE VALID FOR AUSTRALIA

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product.

The Philips product carries the following warranties: C-series HiFi-systems: 12 months. Compact Disc Players: 12 months. Home Audio Systems: 6 months. Clock radios, portable radios, cassette recorders, cassette players and radio recorders: 90 days.

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

Note: Please retain your purchase docket to assist prompt service.

Conditions of this warranty

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.
2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

**Philips Consumer Products Division,
Technology Park
Figtree Drive, Australia Centre
Homebush 2140, New South Wales**

GUARANTEE AND SERVICE FOR NEW ZEALAND

Thank-you for purchasing this quality Philips product. The document you are now reading is your guarantee card.

Guarantee

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions.

1. The product must have been purchased in New Zealand, and this guarantee card completed at time of purchase (this is your proof of the date of purchase).
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket or completed guarantee card) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim.

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product. However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**The Guarantee Controller,
Philips New Zealand Ltd.
P.O. Box 41,021
Auckland
(09) 84 44 160**

GARANTÍA PARA MÉXICO

Este aparato está fabricado con materiales de alta calidad y ha sido cuidadosamente verificado. Philips, por lo tanto, da a usted una garantía de 12 meses a partir de su fecha de compra.

La garantía ampara la reposición de las piezas defectuosas debidas a fallas en su montaje o en los materiales, incluyendo la mano de obra necesaria para su reemplazo en nuestras Sucursales o talleres autorizados.

En caso de fallas en su aparato le rogamos se sirva poner en contacto con su distribuidor.

Esta garantía no cubrirá las averías que resulten como consecuencia de una instalación incorrecta del aparato, manifiesto maltrato o uso inadecuado del mismo. Philips se obliga a reparar y devolver a usted su aparato en un plazo no mayor de 30 días hábiles contados a partir de la fecha de haber ingresado su aparato a uno de nuestros talleres.

Para que esta garantía sea válida, es necesario que el certificado que figura en la parte posterior de esté instructivo haya sido debidamente llenado en el momento de la compra del aparato.

En caso de extravío del certificado con la presentación de la factura o remisión de su aparato podrá hacer efectiva la garantía correspondiente.

Si usted tiene alguna duda o pregunta que no le pueda solucionar su distribuidor, por favor ponerse en contacto con

**Oficinas Centrales de Servicio,
Av. Coyoacán No. 1051, Col. del Valle,
03100 MÉXICO, D.F.
☎ 5-75-20-22 o 5-75-01-00**

804



This sign on the packaging
is only meant for Germany

Dieses Zeichen auf der Verpackung
gilt nur für Deutschland

Le symbole sur l'emballage
n'a que du sens en Allemagne

Dit symbool op de verpakking
is alleen van toepassing in Duitsland

Esta señal en el paquete
es válida sólo para Alemania

Questo simbolo sull'imballaggio
è destinato solo alla Germania

Detta märke på förpackningen
gäller endast för Tyskland

Detta merke på emballaget
endast avsett for Tyskland

Tämä pakkausessa oleva merkki on
tarkoitettu ainoastaan saksaa varten